Ventus
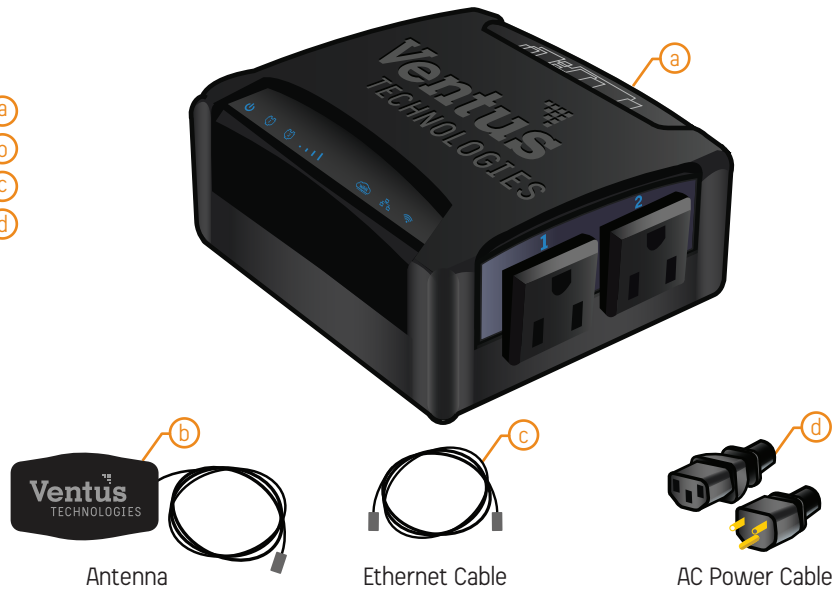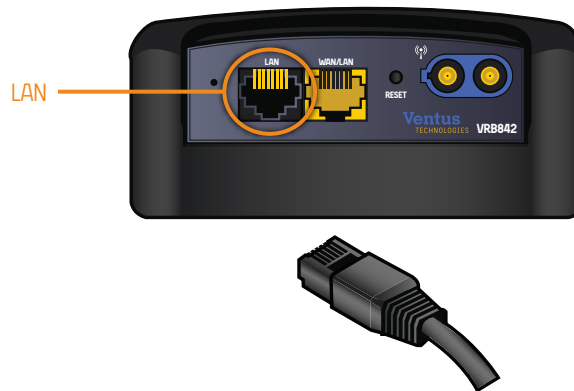A DIGI COMPANY

Ventus VRB842

Packing List and Setup Manual

INCLUDED IN THE BOX

- Ventus VRB842 Router — a
- Compact Dual Antenna Quick Connect — b
- Ethernet Cable — c
- AC Power Cable — d

Antenna   Ethernet Cable   AC Power Cable

**1** Plug Ethernet cable into LAN port on the VRB842 router then into customer's device.

LAN

2 Securely fasten the antenna via the QUICK CONNECT end of the antenna cable, aligning the notch key on the left.

QUICK CONNECT

3 Connect the AC power cable to the IEC POWER ENTRY.

IEC POWER ENTRY

4 Router POWER light will be on. Wait for CELL LINK light to turn solid BLUE. This can take from 2 to 5 minutes.

CELL LINK

POWER

5 REBOOT POWER OUTLETS INDICATOR LIGHTS 1 and 2 will turn solid BLUE indicating power. Plug in customer's device(s) according to customer's instructions.

INDICATOR LIGHTS

QUICK TIP: Device REBOOT POWER OUTLETS are powered on by default when unit is shipped.

REBOOT POWER OUTLETS

For Ventus Technical Support Center call 1-800-620-3586